

Problem: Dialer dials out without activation.

Possibilities:

1. Channel configuration not appropriate for alarm device, i.e. normally closed contact programmed to be normally open.
Solution: Reprogram channel to correct configuration.
2. Not a true dry contact-voltage coming off contact triggering alarm.
Solution: add resistor across channel and program channel appropriately.
3. Make sure all contacts are set in normal condition before putting the dialer into operate mode.